 
 


Interface Specification

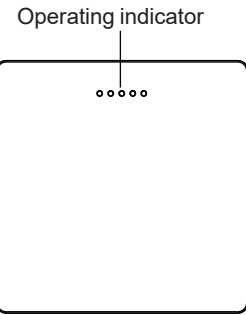

 
Mixer(Optional)

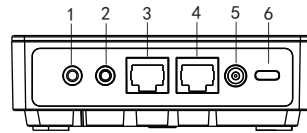


- 1.AUX:Audio input
- 2.IN/OUT:Audio input/output
- 3.NEXT2:Connect to ceiling microphone(POE)
- 4.NEXT1:Connect to ceiling microphone(POE)
- 5.POWER:DC12V/2A power interface
- 6.USB: USB powering and transmitting audio data

User Manual

Connection Diagram

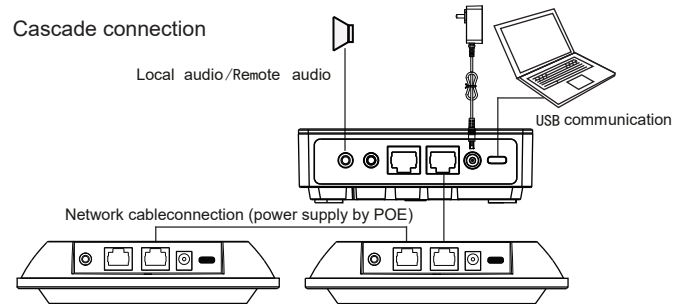

Package List

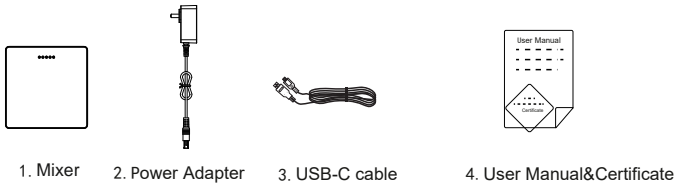 

Warranty

Terms of warranty

Retail purchaser purchasing conferencing systems are free to repair defects in materials and craftsmanship, subject to or excluded from the terms set forth below.

Warranty Period

The warranty period is from the date of sale. During the warranty period, if the following conditions are found, the warranty will not be granted:

- Damaged or not maintained in a reasonable manner or as recommended in the User Manual;
- Modified, altered or used as part of any conversion kits, accessories or any configurations not sold by our company
- Repaired by someone other than an authorized Repair Agent who is not authorized by our company in relation to a defect or malfunction covered by this warranty;

Warranty content

This warranty applies to the conference system and all standard accessories, but does not include paper items such as storage cards, packaging and instructions.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Procedure for Obtaining Warranty Service

If the product purchased by the customer needs to be guaranteed, the customer can mail the device and the customer's purchase certificate (such as a copy of the sales invoice) to your equipment dealer. Before mailing the goods, we recommend that the customer backup the data first, in case of maintenance lost or damaged in the process.

Product Parameters

Support dual-channel 2-level cascade transmission

Hardware interface

- 3. 5mm audio interface:2
- USB interface: 1
- Network interface: 2
- Power interface: 1

Other Parameters

- Power supply: Adapter DC 12V/1A
- Cascading mode: POE power supply

Attentions

This manual introduces the functions, installations and operations for this device in details. Please read this manual carefully before installation and use.

1. To prevent damage to this product or any product connected to it, this product can only be used within the specified range.
 - Do not expose the product to rain or moisture.
 - To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.
 - Do not use the product beyond the specified temperature, humidity or power supply specifications.
2. Electrical Safety.Installation and use of this product must strictly comply with local electricalsafety standards.
3. Avoid damage to the product caused by heavy pressure, strong vibration or immersion during transportation, storage and installation.
4. Install with Caution
 - Housing of this product is made of organic materials. Do not expose it to any liquid, gas or solids which may corrode the shell,do not power on before completing installation.
5. Do not Disassemble the Product without Permission.This product contains no partswhich can be maintained by the users themselves. Any damage caused by dismantling the product by the user without permission is not covered by warranty.