



物料描述 (名称) : 说明书
图纸发布日期:

基本工艺:
折页 风琴折 100克双胶纸 单色印刷

刀模线: _____

产品尺寸: 120x113mm

Camera Remote Control

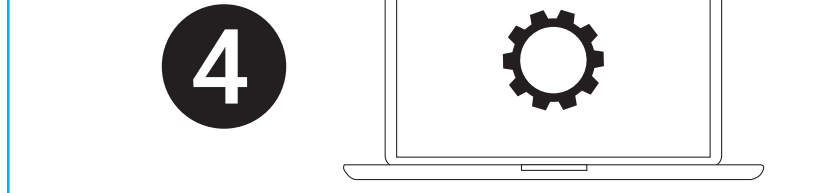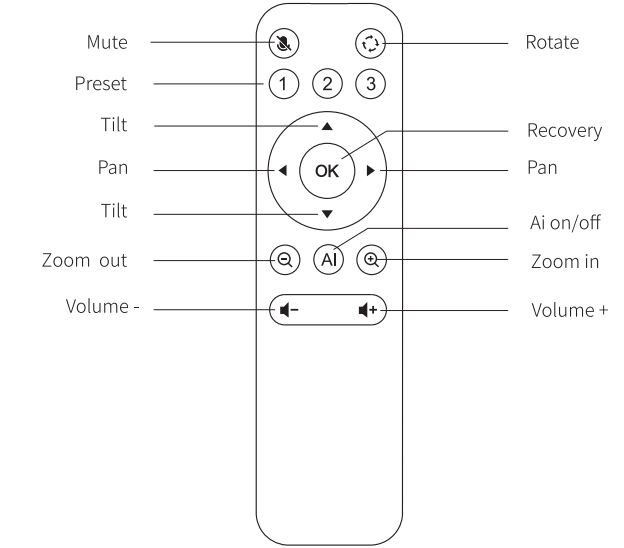

In computer/conference software settings, choose the source of camera, microphone and speaker from the usb video bar.



Camera indicator light status

The camera indicator light will turn blue when camera program is opened or under running; It will turn red when microphone is muted. For other normal conditions, the light will be green.

Camera preset settings

Adjust the camera view to the position you want to preset, then long press 1 (or 2, 3) button for 2seconds. After a hint tone, camera preset 1 is set successfully. Repeat the above steps, press 1, 2, 3 keys respectively, you can set 3 preset positions in total. Repeating the same key will overwrite the previous preset and update it to the latest preset.

摄像机遥控器

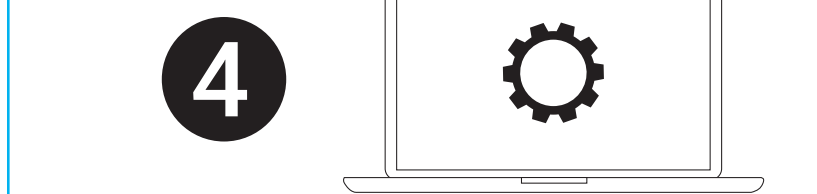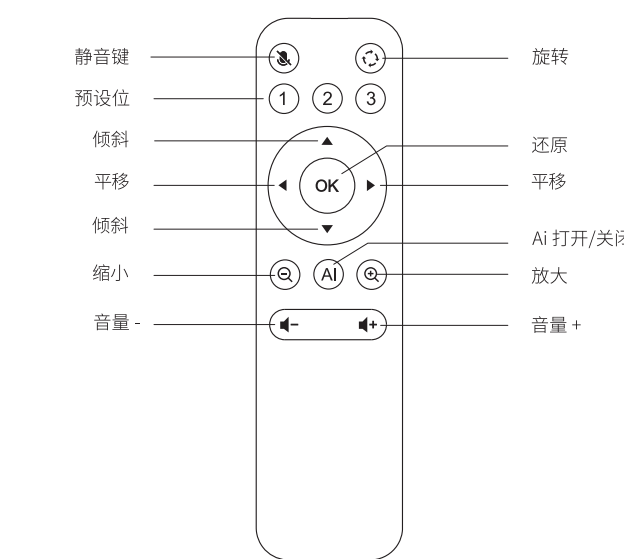





在电脑和会议软件设置中, 摄像头, 麦克风和喇叭分别选中此设备。

摄像头状态灯指示


当摄像头程序打开或者运行时, 摄像头指示灯为蓝色。当麦克风静音时, 摄像头指示灯为红色。其他正常运行情况下为绿色。

预设位设置

摄像头视野调至想要预设方位, 长按1(或者2,3) 键2秒左右, 即可听到提示音, 此时预设位1设置成功。重复以上步骤, 分别按1,2,3键, 可以依次设置3个预设位。重复同一个按键会覆盖此前的预设位, 更新为最新的预设位。

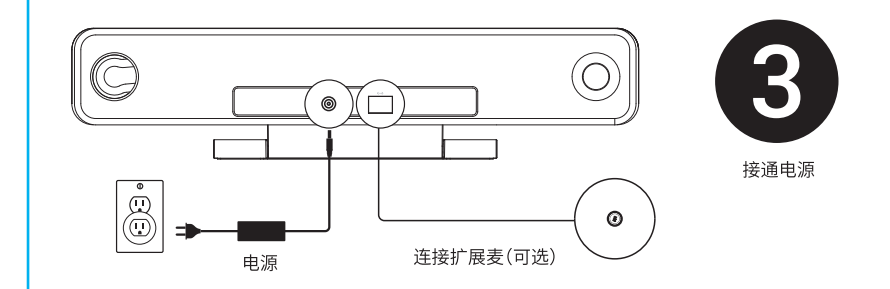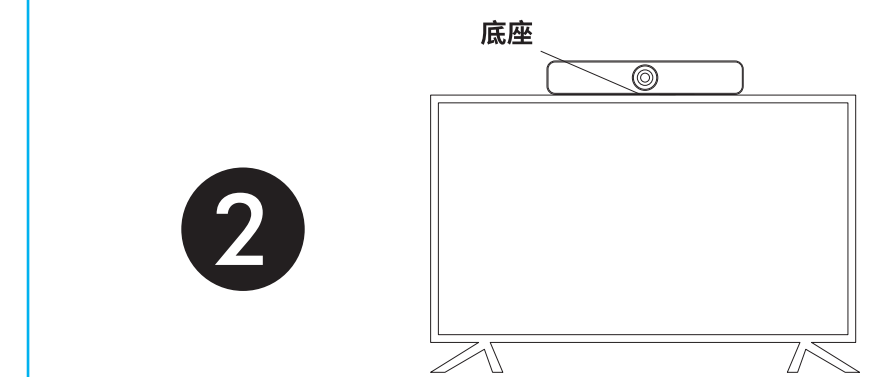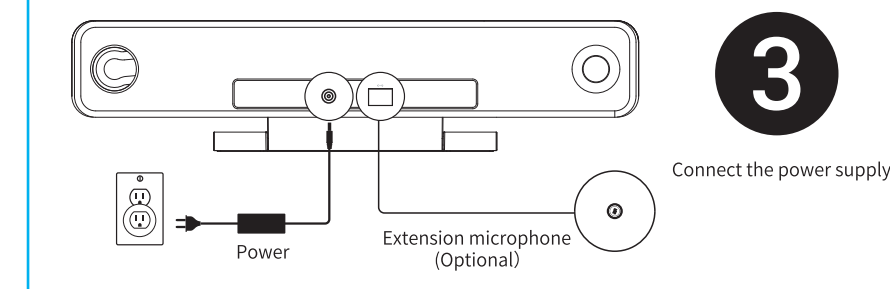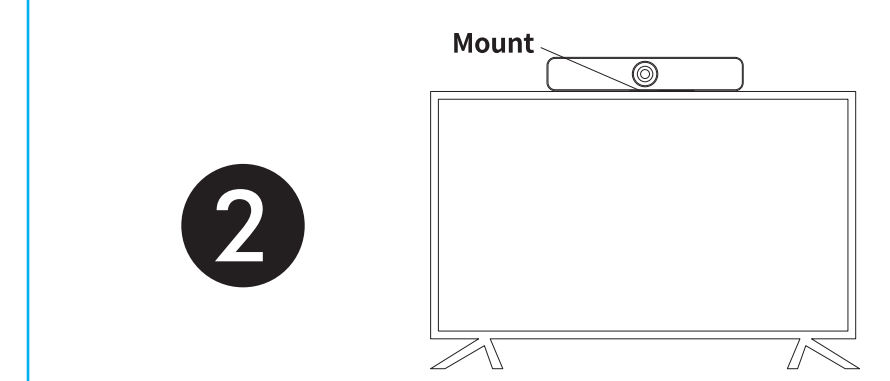


Easy Set-Up

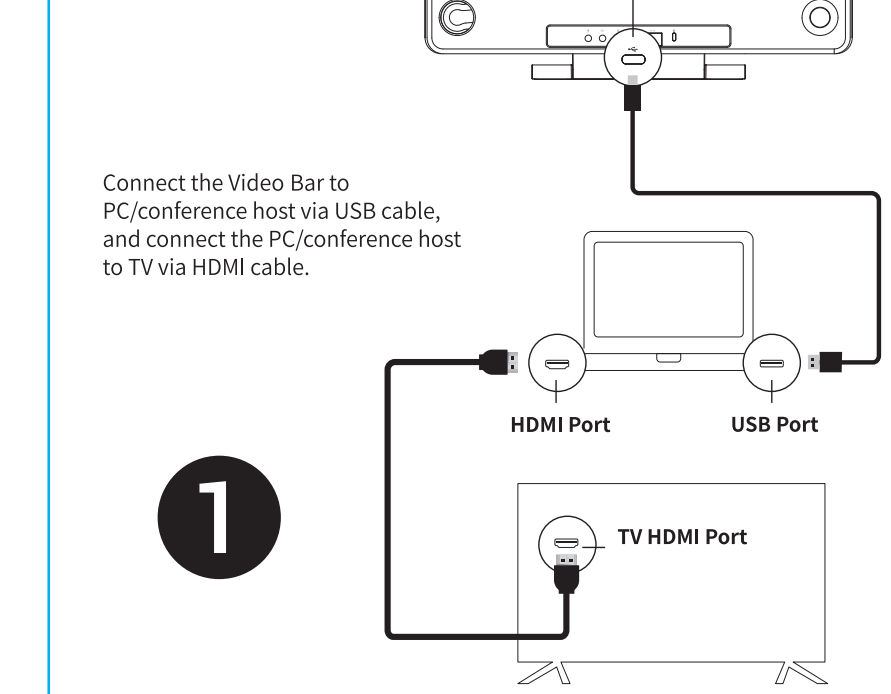


Connect the Video Bar to PC/conference host via USB cable, and connect the PC/conference host to TV via HDMI cable.

快速安装指南

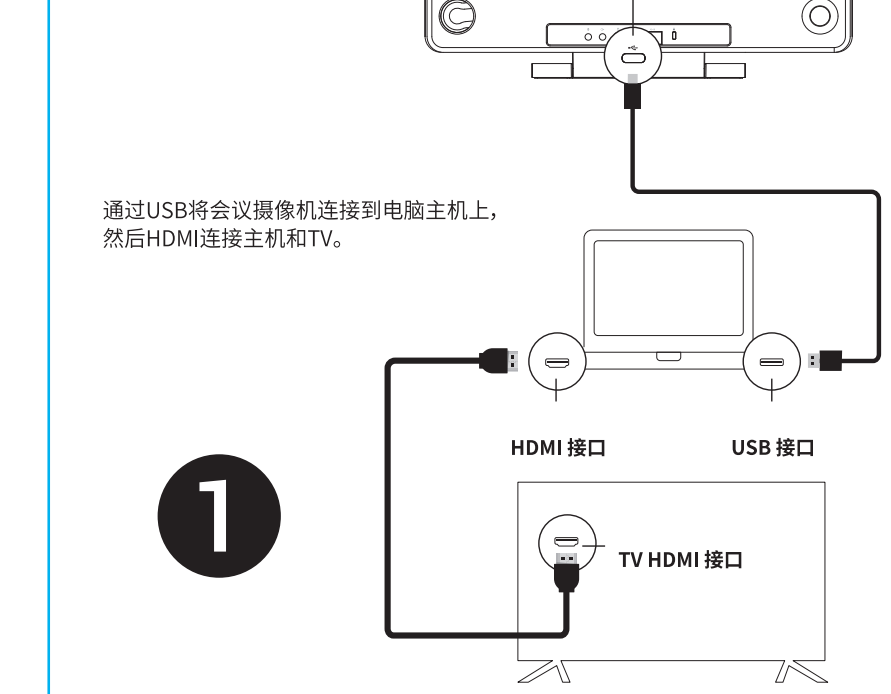


通过USB将会议摄像机连接到电脑主机上, 然后HDMI连接主机和TV。


Overview

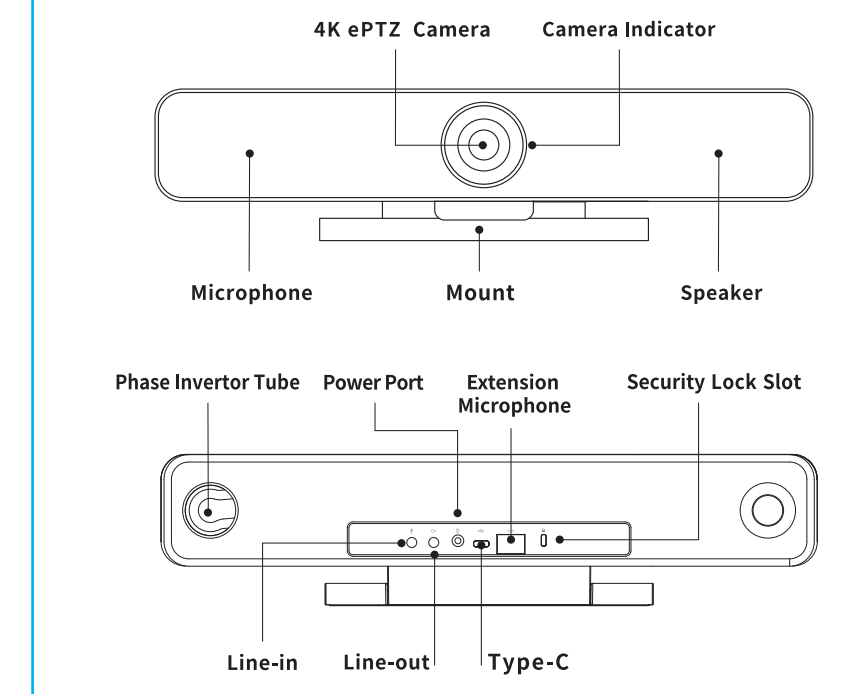


产品概览

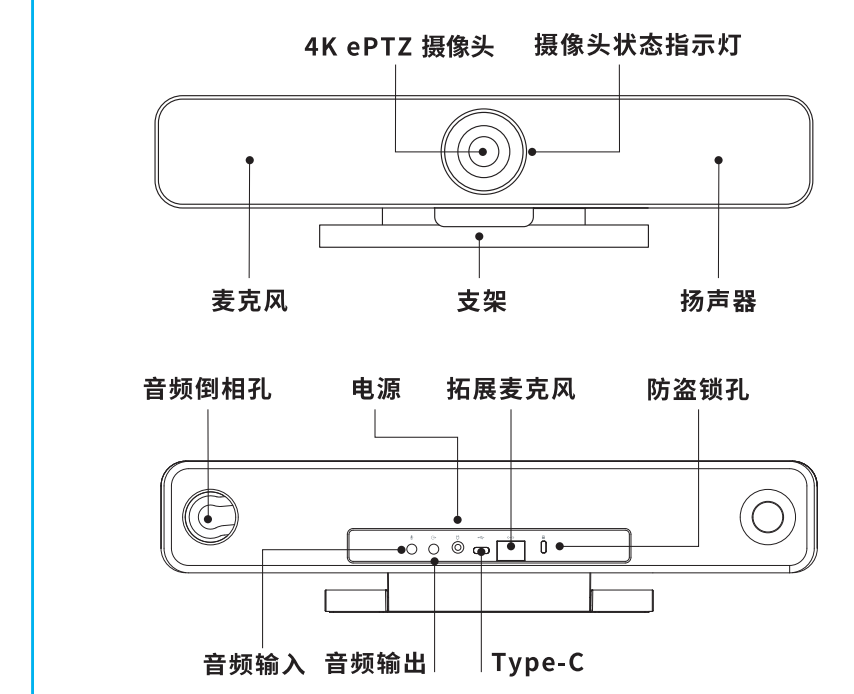


What's in the box

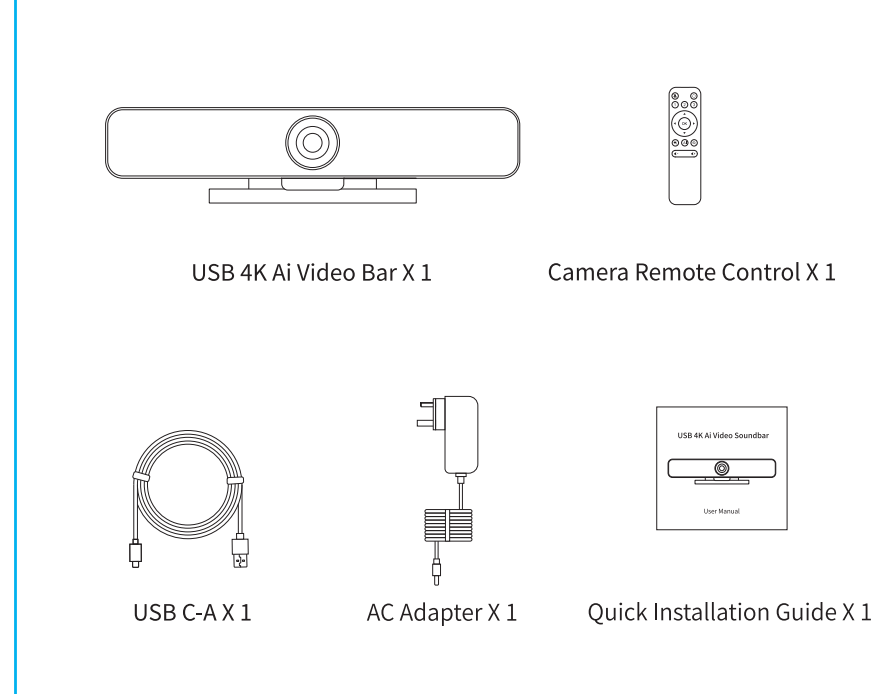

包装清单

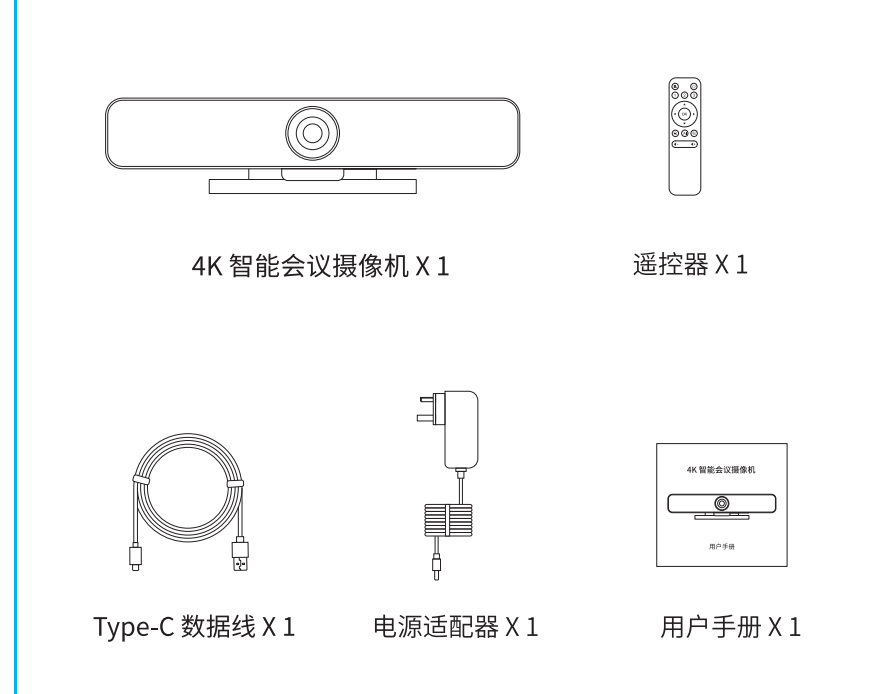


USB 4K Ai Video Bar

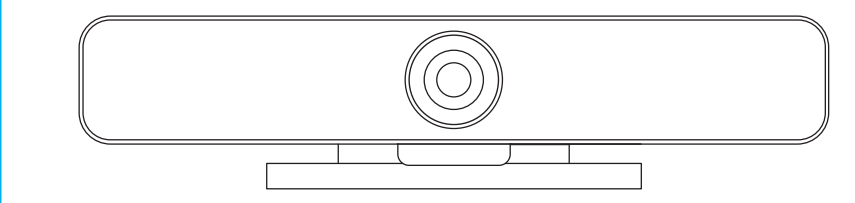

User Manual

4K 智能会议摄像机

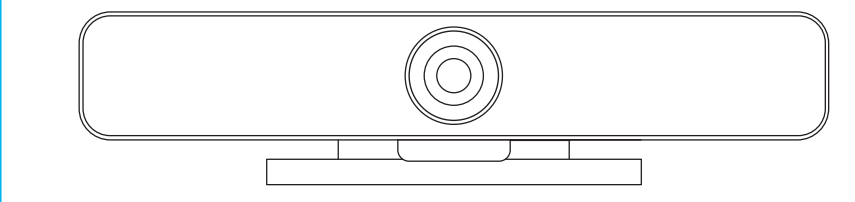

用户手册