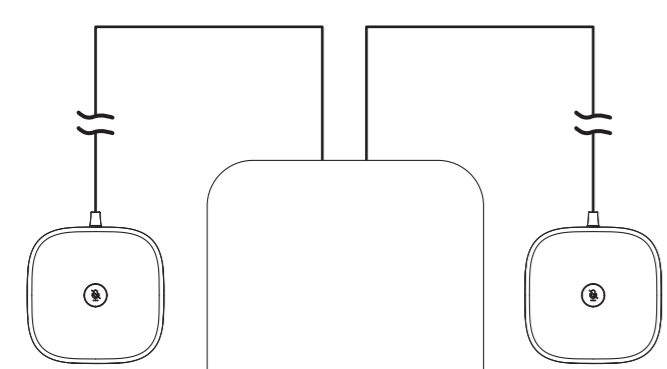 
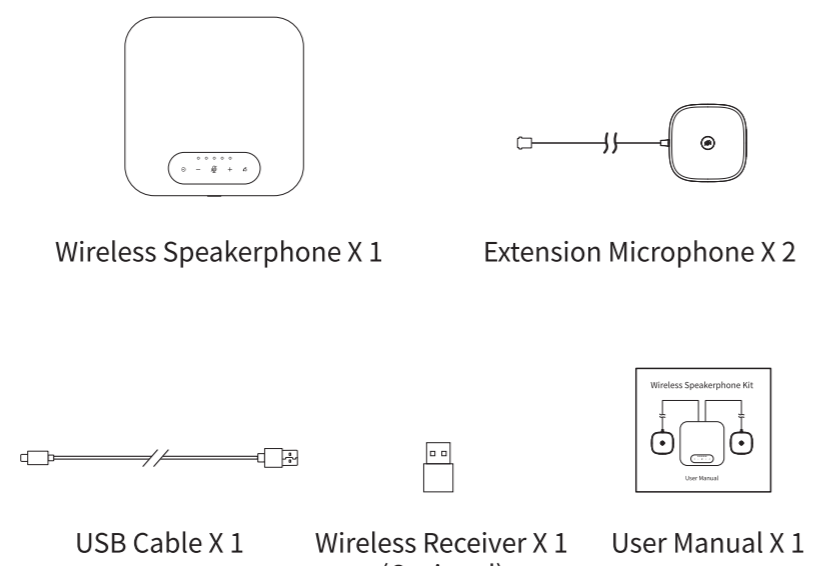 
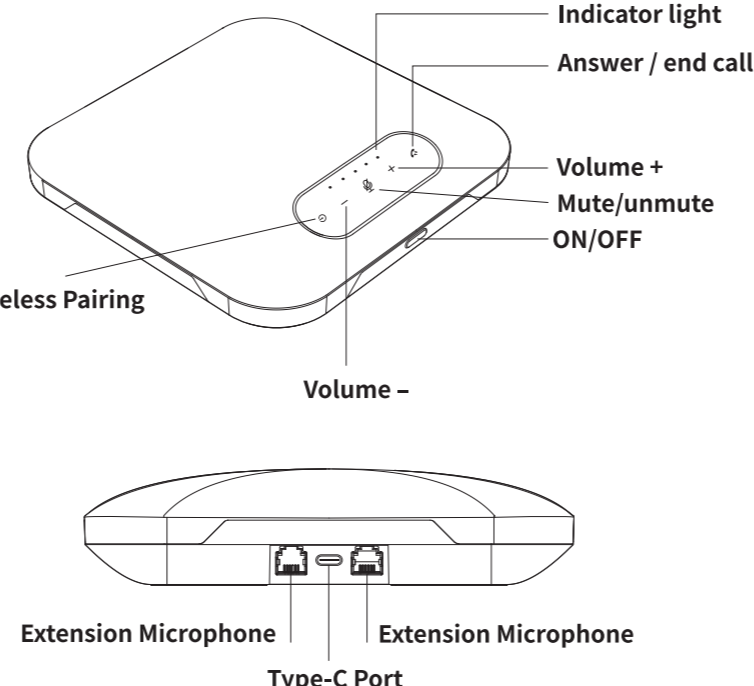 

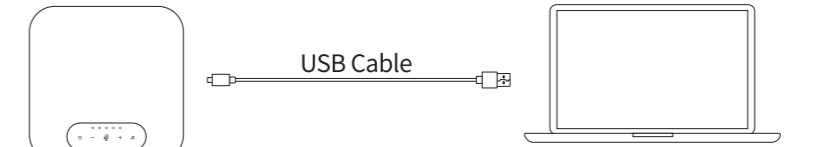 
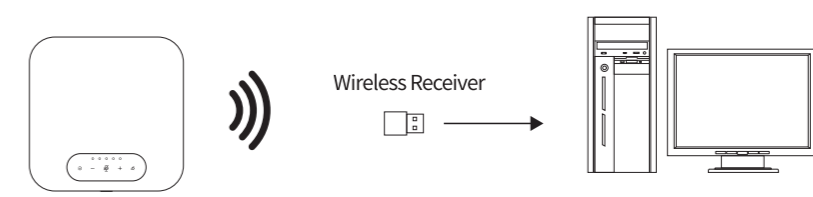 


单面尺寸:120X110mm

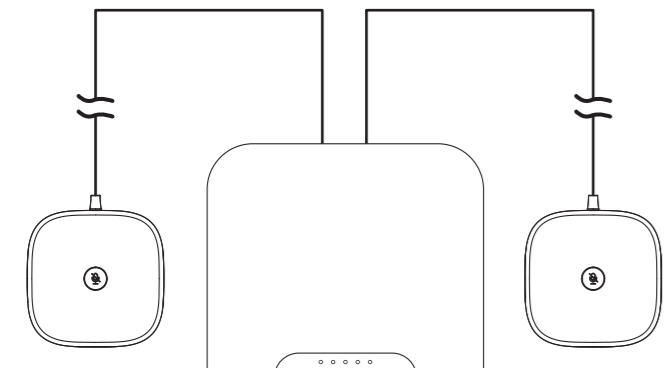 
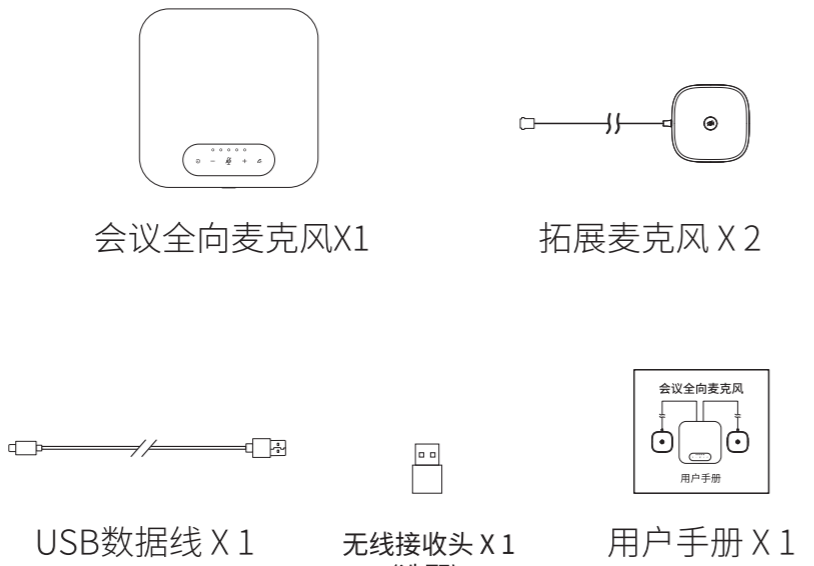 
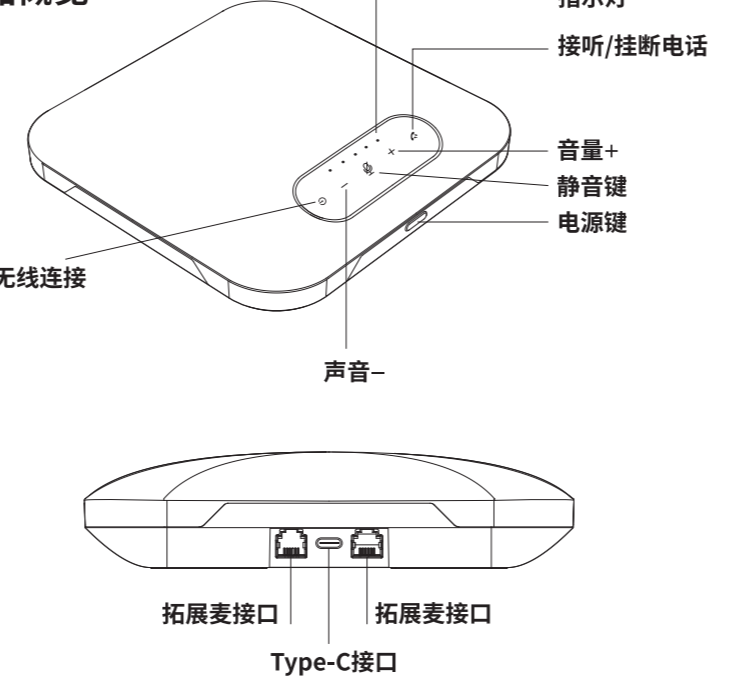 

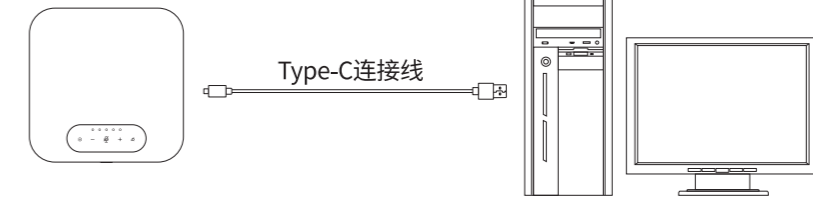 

材料:100克双胶纸 单色印刷

工艺:风琴折

正面

<h3>Wireless Speakerphone Kit</h3>  <p>User Manual</p>	<h3>What's in the box</h3>  <p>Wireless Speakerphone X 1 Extension Microphone X 2</p> <p>USB Cable X 1 Wireless Receiver X 1 (Optional) User Manual X 1</p>	<h3>Overview</h3>  <p>Indicator light Answer / end call Volume + Mute/unmute ON/OFF Volume - Wireless Pairing Extension Microphone Type-C Port</p>	<h3>Easy Set-Up</h3> <ol style="list-style-type: none"> Power On/off Connect the two extension microphone to the main speakerphone. Long press ON/OFF for 2s, the speakerphone will be turn on/off with hint tone. Connect and disconnect <ol style="list-style-type: none"> Wireless connect A. After power on, long press wireless pairing button for about 2s to start pairing mode. You will hear "pairing" (white and blue flashing light). B. Turn on your device and choose to connect with the speakerphone. Wait for 3s until you hear hint tone. C. To cancel pairing: a short click on pairing button.(flashing light turn white). D. To disconnect: a long press on pairing button for about 2s, you will hear hint tone. (Blue light turn white). 	<ol style="list-style-type: none"> Connect by USB cable Connect with computer by USB cable.  <ol style="list-style-type: none"> Connect by Wireless Receiver (optional) Connect the USB wireless receiver to your computer, and start pairing mode on speakerphone. Wait for about 10 seconds until the pairing is completed, then the speakerphone is connected and ready to go. 	<ol style="list-style-type: none"> Answer /end calls Press button to answer calls, then press button to end calls, Long press button to hang up call directly. Speaker volume up/down + Speaker volume up, - Speaker volume down Mute 6.1 Press mute button, microphone will be mute. Press again, to unmute. 6.2 Press mute button on main unit, all microphones are muted at the same time. Press mute button on extension microphone, the microphone is muted separately. When microphone is working, light will be white. When it is muted, light will be red. Auto Power Off When device is not connected in 15mins, it will shut down automatically. Battery level Connect speakerphone by USB, it's charging and 5 dots in green light shows battery level. When speakerphone is not charging, a short click on power on/off button, the 5 dots in green light shows battery level. 5 dots breath light : battery low level and needs charge.
---	--	---	---	--	--

反面

<h3>会议全向麦克风</h3>  <p>用户手册</p>	<h3>包装清单</h3>  <p>会议全向麦克风X1 拓展麦克风 X 2</p> <p>USB数据线 X 1 无线接收头 X 1 (选配) 用户手册 X 1</p>	<h3>产品概览</h3>  <p>指示灯 接听/挂断电话 音量+ 静音键 电源键 声音- 无线连接 拓展麦接口 Type-C接口</p>	<h3>快速安装指南</h3> <ol style="list-style-type: none"> 开/关机 连接两个扩展麦至主全向麦(扩展麦接口不分左右)。长按电源键2s左右,听到提示音,全向麦开机/关机。 连接和取消连接 <ol style="list-style-type: none"> 无线连接 A. 开机后,长按按键 2s,听到提示音进入无线配对模式,此时为蓝白呼吸灯。 B. 打开手机或电脑无线设置,选择全向麦进行配对连接,连接成功指示灯为蓝色。 C. 取消无线配对,短按按键 即可。 D. 取消无线连接,长按按键 2s左右,取消成功指示灯从蓝色变为白色。 	<ol style="list-style-type: none"> USB连接 用USB连接线将设备与电脑连接  <ol style="list-style-type: none"> 接收器连接(选配) 将USB接收器先插入电脑USB口,再将设备开机,打开无线配对模式,等待15秒左右,配对完成。  <ol style="list-style-type: none"> 音源切换功能 当无线连接和USB声卡同时连接,短按/轻触,切换到无线或者USB声卡。 	<ol style="list-style-type: none"> 电话接听/挂断功能 通话状态时,按下 通话键,电话挂断。电话呼入时,按下 通话键,接听电话。电话呼入时,长按 通话键,电话挂断。 音量调节功能 +音量增加, -音量减少。 麦克风静音功能 6.1 按主麦的麦克风静音按钮,所有麦克风静音,按扩展麦静音按钮,对应麦克风静音,麦克风工作状态指示灯白色,静音状态为红色。 自动关机功能 设备在无线和USB没连接状态下,15分钟后自动关机。 电池电量指示 当充电或者短按电源键时,以绿色光作为充电/电量指示。
--	--	--	---	--	---