



Remote control setting operation

M Motorized Ceilingmount Inverted



EAN: 735007373 9585



1. Remote control code pairing operation: turn on the power and press the LEARN button on the receiving box for 3-5 seconds, the red indicator light on the receiver flashes slowly, press the up button on the remote controller once within 10 seconds, and the blue light on the receiver flashes quickly 3 times, the code is successful.
2. Jog linkage switch: Press the stop button of the remote control with the correct code for 5 seconds, the red light of the receiver will flash slowly, press the up button of the remote control once within 10 seconds, the blue light will flash 3 times quickly, the setting is successful.
3. Delete the remote control: Press the stop button of the remote control with the correct code for 5 seconds, the red light of the receiver flashes slowly, press the button on the back of the remote control once within 10 seconds, the blue light flashes quickly 3 times, the setting is successful.

RS232 control or RS485 control

Learn mode Control

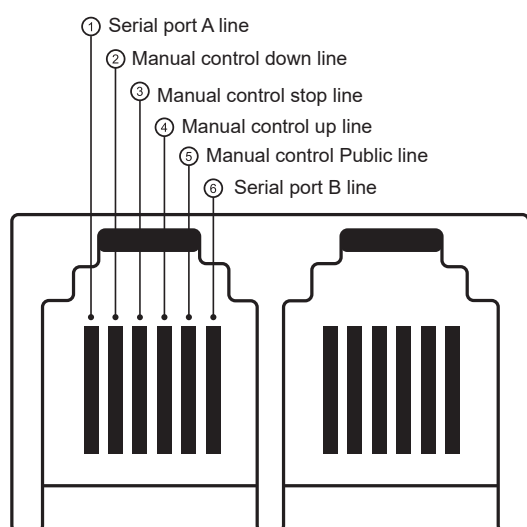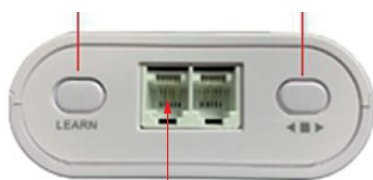

RS232 control or RS485 control

Machine connection ①pin (signal grounding) ⑥pin (signal receiving)

Serial port settings: Baud rate 2400

Data bits: 8

Parity bits: N

Stop bits: 1

Group control code: hexadecimal

Ascent: 9a 00 01 00 0a (repeat five times)

Stop: 9a 00 01 00 0a cc c7 (repeat five times)

Descend: 9a 00 01 00 0a ee e5 (repeat five times)




Remote control setting operation

M Motorized Ceilingmount Inverted

EAN: 735007373 9585



Central control wiring

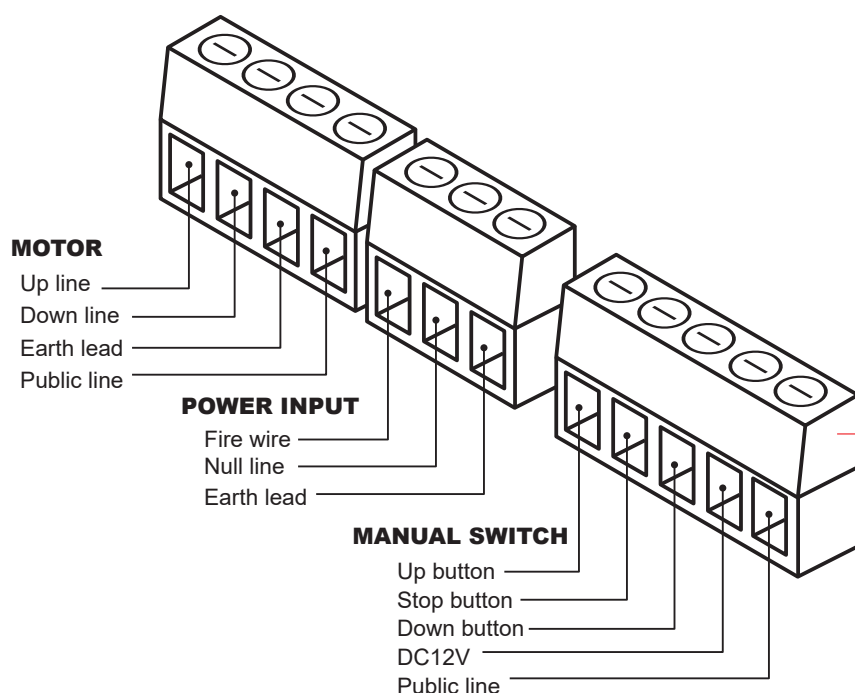

Central control wiring

The interface adopts 6P crystal head wiring

Contact control

Weak current relay

- ② Down ③ Stop ④ Up ⑤ Public
- ② and ⑤ Touch down once
- ③ and ⑤ Touch to stop
- ④ and ⑤ rise when touched