Factory Reset instruction

®
M U L T I B R A C K E T S

Light Indicator —————— Set button

Position 1 ——— 1 ——— 2 ——— Position 2

Open ——— ◀ OK ▶ ——— Close

Stop

Memory 1 ——— mem1 — mem2 ——— Memory 2

remote control

1

Unplug and replug first

2

4 times
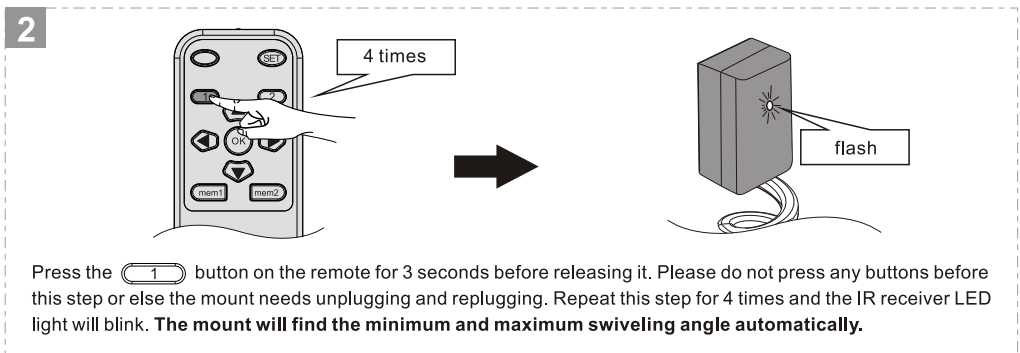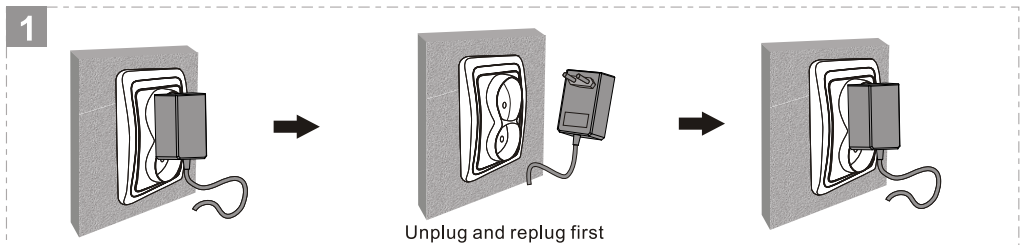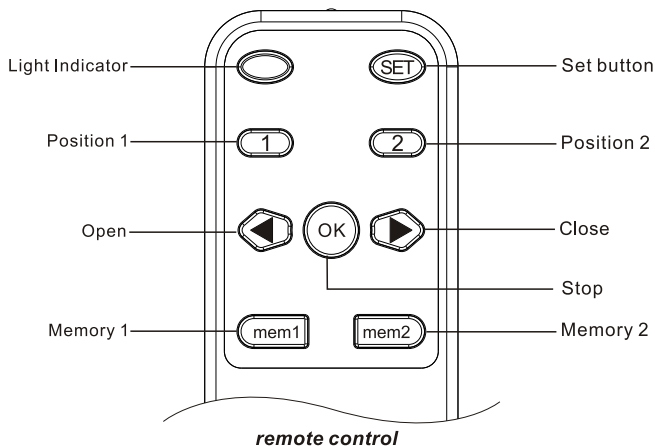
flash

Press the [1] button on the remote for 3 seconds before releasing it. Please do not press any buttons before this step or else the mount needs unplugging and replugging. Repeat this step for 4 times and the IR receiver LED light will blink. **The mount will find the minimum and maximum swiveling angle automatically.**

⚠️ *Please keep the power on during the resetting.*