X-KIT

Quick Guide

AOSEED

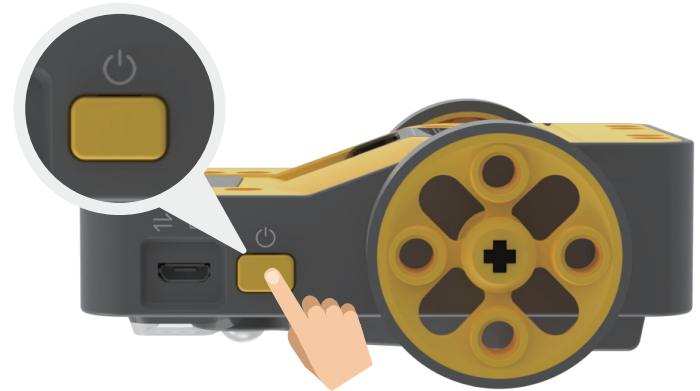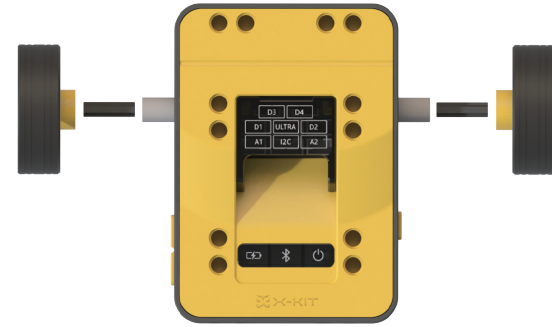## Micro-USB

★ It is used for both charging and transferring data

★ Make sure the Hub is ON when transferring data

| Not Charging | Charging | Fully Charged |

for How-to Videos and further supports

Install the 2 wheels onto the hub with 2 axle pins.If you are using the 3D printed wheels, put tires on them before installation

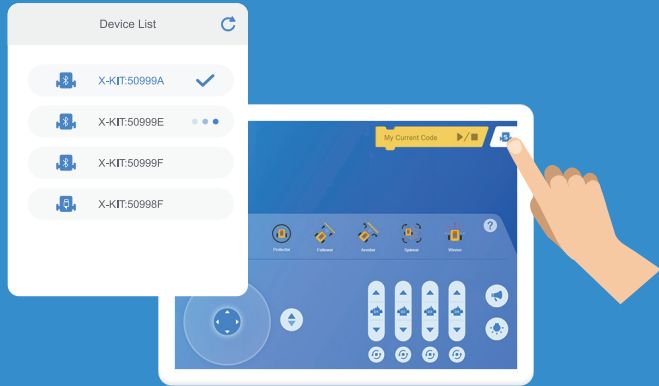Press & hold the power-on button for 5s to turn your device on

Install the X-KIT APP

https://www.aoseed.com/downloads/X-KIT

Windows PC
Windows7 or above

Android Tablet
Android Tablet 10.0 or above

iPad
iOS 14.0 or above

Device List

X-KIT:50999A ✓

X-KIT:50999E ● ● ●

X-KIT:50999F

X-KIT:50998F

Servomotor x4	Sensor x1	Buzzer x1
The Hub x1	Wheels x2	Tires x8	Rubber Tracks x1
Quick Guide x1	Map x1	Ball Pin x1	Long Pin x1	Pin x1
USB x1	Plier x1	Axle x1	Axle Pin x1	Ball Axle x1

Servomotor x4

Sensor x1

Buzzer x1

The Hub x1

Wheels x2

Tires x8

Rubber Tracks x1

Quick Guide x1

Map x1

Ball Pin x1

Long Pin x1

Pin x1

USB x1

Plier x1

Axle x1

Axle Pin x1

Ball Axle x1

M1

M2

D3

D4

D1

ULTRA

D2

A1

I2C

A2

RGB1 IR-1

IR-2 RGB2