






Z01 Totem Installation Instruction

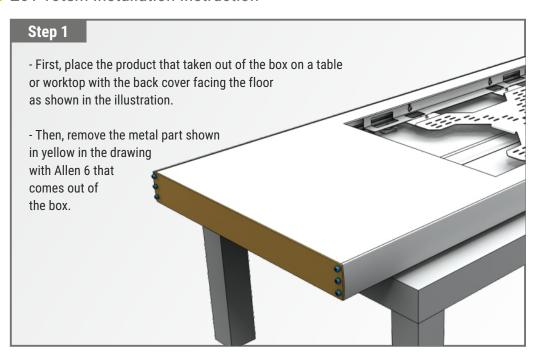


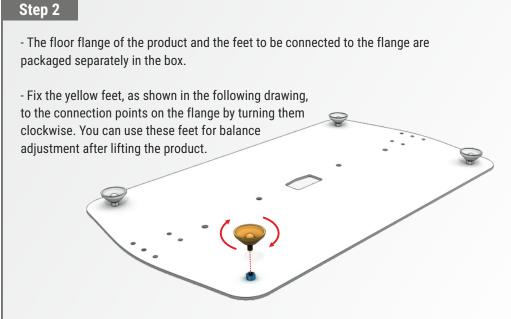


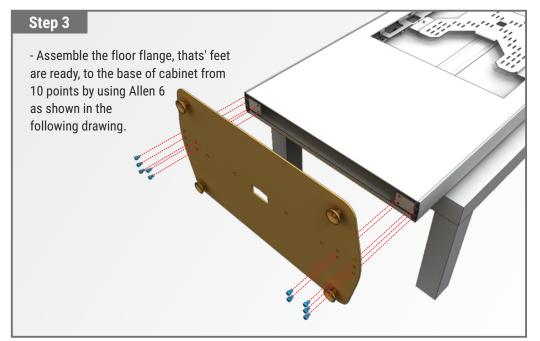


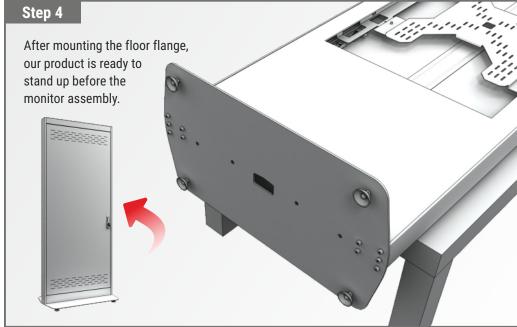


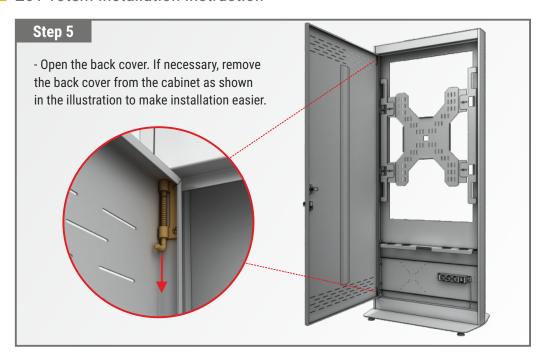


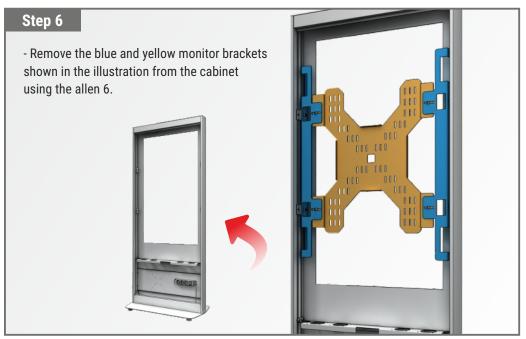


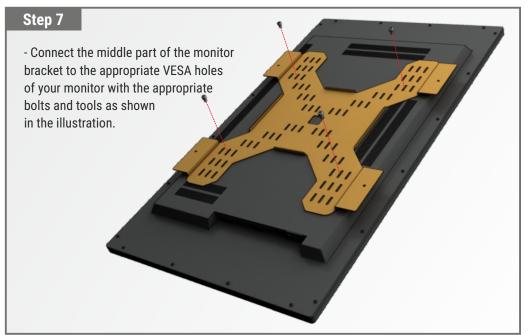

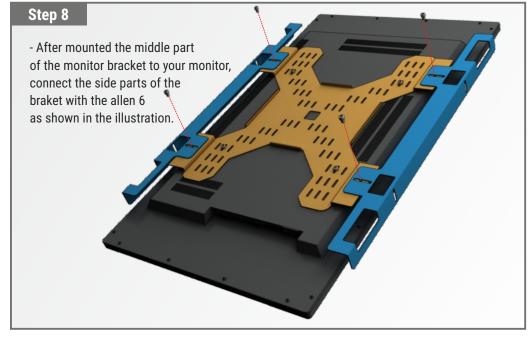

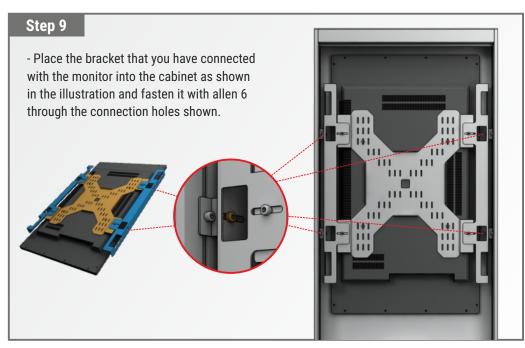

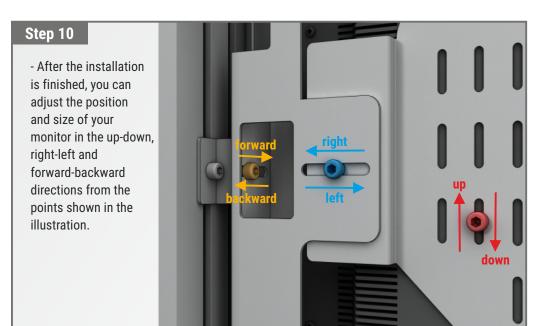

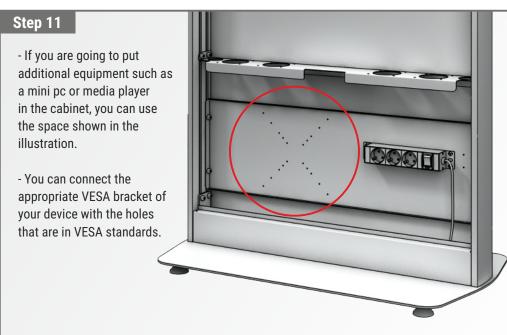

## Step 12

- Take the cable from the PDU (Power Distribution Unit) inside the cabinet out of the area indicated by the blue arrow. If you want, you can also take out different cables such as network cable, external USB cable from this section.
- If you wish, you can fix your product to the floor from the places marked with red arrows. (Recommended)

